



Fusion4 LAD

Installation & Operation Manual

MN06308 Issue/Rev. 0.2 (3/26)



Important

All information and technical specifications in this document have been carefully checked and compiled by the author; however, we cannot completely exclude the possibility of errors. Guidant Measurement is always grateful to be informed of any errors; contact us at TechnicalCommunications@GuidantMeasurement.com.

Caution

The default or operating values used in this document and in the configuration parameters of the product described in this document are for factory testing only and should not be construed as default or operating values for your system. Each system is unique and each configuration parameter must be reviewed and programmed for that specific system application.

Disclaimer

Guidant hereby disclaims all responsibility for damages, including but not included to consequential damages arising out of or related to the inputting of incorrect or improper program or default values entered in connection with the product described in this document.

Technical Support

Field Service Response Center

24/7 Technical Support/Schedule a Technician: +1 844.203.4014

System installation supervision, startup, and commissioning services are available.

Customer Support

Erie Customer Service

Guidant Measurement
1602 Wagner Avenue
Erie, PA 16510 USA
+1 814.898.5000
MS.ResponseCenter@GuidantMeasurement.com

Ellerbek Customer Service

Guidant Measurement
Smith Meter GmbH
Regentstrasse 1 25474 Ellerbek, Germany
P.O. Box 1164 25470 Ellerbek, Germany
+49 4101 304-0
ResponseCenter.MS@GuidantMeasurement.com

Guidant Knowledge Base

KB.GuidantMeasurement.com

Contents

| | |
|---|----------|
| 1 General | 1 |
| 1.1 LAD Overview | 1 |
| 1.2 Target Audience for this Manual | 1 |
| 2 Safety | 2 |
| 2.1 Safety Conventions | 2 |
| 2.1.1 Warnings | 2 |
| 2.1.2 Cautions | 2 |
| 2.2 Safety Instructions for the LAD | 2 |
| 2.2.1 General | 3 |
| 2.2.1.1 EC Declaration of Conformity (for EU) | 3 |
| 2.2.1.1.1 Control Drawings for North American Locations | 3 |
| 2.2.2 Explosion Safety | 4 |
| 2.2.3 Commissioning | 4 |
| 2.2.4 Operation | 4 |
| 2.2.5 Maintenance and Troubleshooting | 4 |
| 2.2.6 Additional Information | 5 |
| 2.2.7 Environmental Conditions | 5 |
| 2.3 Liability | 5 |
| 3 Installation | 6 |
| 3.1 Connecting a LAD to the SSC-A / SSC-B Device | 6 |
| 3.2 Connecting a LAD to the MSC-A / MSC-L Device | 7 |

| | |
|--|----------|
| 4 Operation | 8 |
| 4.1 General | 8 |
| 4.1.1 Introduction | 8 |
| 4.1.2 Text Conventions | 8 |
| 4.2 Menu-Based Control | 8 |
| 4.3 Service Tool | 9 |
| 4.3.1 Fusion4 Local Access Device | 9 |
| 4.3.1.1 General | 9 |
| 4.3.1.2 General LAD Application Overview | 10 |
| 4.3.2 Navigation with Fusion4 LAD | 11 |
| 4.3.2.1 Basic Navigation (Fusion4 LAD) | 11 |
| 4.3.2.2 LEDs (Fusion4 LAD) | 12 |
| 4.3.2.3 Special Function Key on the LAD | 12 |
| 4.3.2.4 SD Card | 13 |
| 4.3.2.4.1 Product Type Selection | 14 |
| 4.3.2.4.2 Directory Structure and File Organization | 15 |
| 4.3.2.4.3 Guidelines | 15 |
| 4.4 Menu and Navigation | 17 |
| 4.4.1 General | 17 |
| 4.4.2 Key Benefits of the HMI on the Main Menu | 17 |
| 4.5 Device Commissioning | 18 |
| 4.5.1 Using the Menu | 18 |
| 4.5.2 LAD Functions of SSC-A and SSC-B | 18 |
| 4.5.2.1 General | 19 |
| 4.5.2.1.1 Firmware Upgrade | 19 |
| 4.5.2.1.2 Test LED, Function Key, and LAD Information Submenus | 23 |
| 4.5.2.1.3 Format SD Card | 25 |
| 4.5.3 LAD Functions of MSC-A | 26 |
| 4.5.3.1 General | 27 |
| 4.5.3.1.1 Firmware Update | 28 |
| 4.5.3.1.2 Verify the Firmware Update | 31 |

- 4.5.3.1.3 Test LED and LAD Information Submenus 32
- 4.5.3.2 Function Key 33
 - 4.5.3.2.1 LAD Information 34
 - 4.5.3.2.2 Format SD Card 34
- 4.5.4 LAD Functions of MSC-L 36
 - 4.5.4.1 General 37
 - 4.5.4.1.1 Firmware Update 38
 - 4.5.4.1.2 Verify the Firmware Update 41
 - 4.5.4.1.3 Test LED and LAD Information Submenus 42
 - 4.5.4.1.4 Function Key 42
 - 4.5.4.1.5 LAD Information 43
 - 4.5.4.1.6 Format SD Card 43
- 4.6 Transfer Calibration 44
 - 4.6.1 Transfer Calibration of a SSC-A/SSC-B Device 44
 - 4.6.2 Transfer Calibration of a MSC-A/MSC-L Device 45
- 4.7 Transfer Configurations 46
 - 4.7.1 Retrieve SSC-A/SSC-B Device Configuration 46
 - 4.7.2 Retrieve MSC-A/ MSC-L Device Configuration 47
- 4.8 Transfer Transactions 48
 - 4.8.1 Retrieving Transaction Records from SSC-A / SSC-B Device 48
 - 4.8.2 Retrieving Transaction Records from MSC-A / MSC-L Device 49
- 4.9 Transfer MSC-L Load Profiles 50
- 4.10 Taking Screen-Shots on MSC-L 53

1 General

1.1 LAD Overview

The Fusion4 devices (SSC-A, SSC-B, MSC-A, and MSC-L) utilizes Local Access Device (LAD) for interfacing, local commissioning, configuration, calibration, troubleshooting, and data exchange, using the Secure Digital (SD) card.

1.2 Target Audience for this Manual

This manual is intended for service technicians who are assigned to install, commission, service, or operate the Fusion4 devices.



2 Safety

2.1 Safety Conventions

2.1.1 Warnings

The following warning formatting used in the manual recommends your attention to prevent personal injuries or dangerous situations.

WARNING: General warning. It is always explained by text.

2.1.2 Cautions

The following caution formatting and symbols used in the manual recommends your attention to prevent damages to the equipment.

CAUTION: General caution information.

CAUTION:  Electrostatic discharge (ESD) sensitive device.

2.2 Safety Instructions for the LAD

Figure 2-1: Local Access Device (LAD)



WARNING: You must strictly follow all the safety instructions mentioned in this manual and the safety instructions (FM06302) shipped with the Fusion4 devices during installation, commissioning, operation, and maintenance for the safe operation of the device.

2.2.1 General

The LAD is a hand-held controller used for interfacing with the SSC-A, SSC-B, MSC-A, and MSC-L devices.

The device facilitates two-way data communication between a parent device and the LAD. It allows rapid transfer of transaction data, configuration files and calibration records, and also upgrading the firmware in the field.

WARNING: Only use the instrument for its intended purpose.

2.2.1.1 EC Declaration of Conformity (for EU)


Refer to the EC declaration of conformity and ATEX certificate(s), shipped with the device for EC declarations.

2.2.1.1.1 Control Drawings for North American Locations

Refer to the control drawings shipped with the Fusion4 Devices as follows:

- LAD - Drawing DS500063215
- SSC - Drawing DS500063517
- MSC - Drawing DS500063216

2.2.2 Explosion Safety

| Approval | Certificate no. | Type of protection identification | | |
|-----------|----------------------|--|--------------------|--|
| ATEX | KEMA 10ATEX0152 |  II 2 G Zone 1 | Ex ia IIB T4 Gb | Ta = -20 °C ... +65 °C (-4 °F ... +149 °F) |
| IECEX | IECEX KEM 10.0070 | Zone 1 | | |
| FM | FM17US0200 | Class I, Division 1 | group C, D T4 | |
| UL-Brazil | UL-BR 25.1436 | Zone 1 | Ex ia IIB T4 Gb | |
| PESO | (Pending) | Zone 1 | Ex ia IIB T4 Gb | |

WARNING: This is an intrinsically safe device and may only be connected to devices with compatible intrinsically safe parameters, such as the MSC-L, MSC-A, SSC- A, and SSC-B.

Connection of non-intrinsically safe signals invalidates the approval. The electrical data of the intrinsically safe circuits is to be taken from the certificate.

2.2.3 Commissioning

The LAD and the Fusion4 devices must be commissioned using this controller trained by Guidant. The service technician must have knowledge of the national, local, and company requirements for electrical equipment in hazardous areas.

2.2.4 Operation

After connecting to a Fusion4 device, the LAD can be used for its intended purpose.

2.2.5 Maintenance and Troubleshooting

The LAD hardware is non-serviceable, in case of damage contact Guidant for replacement.

2.2.6 Additional Information

For additional information about Guidant's solutions, see the back cover of this manual to contact Guidant or its representative.

2.2.7 Environmental Conditions

The environmental conditions regarding the allowable operating temperature is -20 °C to +65 °C (-4 °F to +149 °F), relative humidity is RH 5 to 95%, non-condensing, and operating pressure is atmospheric.

2.3 Liability

The information in this installation manual is the copyright property of Guidant. Guidant disclaims any responsibility for personal injury or damage to the equipment caused by the following:

- Deviation from any of the prescribed procedures.
- Execution of activities that are not prescribed.
- Neglecting the safety regulations for handling tools and use of electricity.

The contents, descriptions, and specifications in this manual are subject to change without notice. Guidant accepts no responsibility for any errors that may appear in this manual.

WARNING: Only certified technicians are authorized to make changes to the Fusion4 device configuration. All modifications must be in accordance with the guidelines as set forth by Guidant. Modifications not authorized by Guidant invalidates the approval certificates.

3 Installation

3.1 Connecting a LAD to the SSC-A / SSC-B Device

The SSC-A and SSC-B devices have an intrinsically safe interface connector for the LAD. Connect the female connector on the LAD to the male connector on the SSC-A or SSC-B device, and then fasten the connection (see figure below).

Figure 3-1: Connecting a LAD to the SSC-A / SSC-B device



3.2 Connecting a LAD to the MSC-A / MSC-L Device

The MSC-A and MSC-L devices have an Intrinsically safe interface connector for the LAD. Connect the female connector on the LAD to the male connector on the MSC-A or MSC-L device, and then fasten the connection (see figure below).

Figure 3-2: Connecting a LAD to the MSC-A / MSC-L device



4 Operation

4.1 General

4.1.1 Introduction

This chapter provides the commissioning information for the Fusion4 devices.

Commissioning the Fusion4 devices is accomplished by configuring entities (or parameters) to the required values. This is performed using the menu options of the Fusion4 devices. See [Section 4.4: Menu and Navigation](#), for more information.

4.1.2 Text Conventions

In contrast with the explanatory text, all instructions are preceded by a (>).

All [Entity] and <entity-related> texts are in a recognizable format.

For example, the Entity is in the format [Units of additive volume] and the entity-related text is in the format <Milliliter>.

4.2 Menu-Based Control

By using an external control device, (through an Ex d/ Ex i connector) based Local Access Device (LAD), the Fusion4 devices can be fully controlled through its integrated menu based interface. It is possible to navigate the menus, change settings (commissioning), initiate a calibration, and diagnose problems.

4.3 Service Tool

4.3.1 Fusion4 Local Access Device

4.3.1.1 General


The Local Access Device (LAD) is a hand-held controller used for interfacing with the Fusion4 product family, allowing tasks such as parameter adjustment, alarm resetting, and calibration.

The device facilitates two-way data communication between a parent device and LAD.

The functions supported by LAD are as follows:


1. Rapid transfer of transaction data, configuration of files and calibration of records.
2. Upgrade the firmware in the field.

Figure 4-1: LAD and Its System Overview

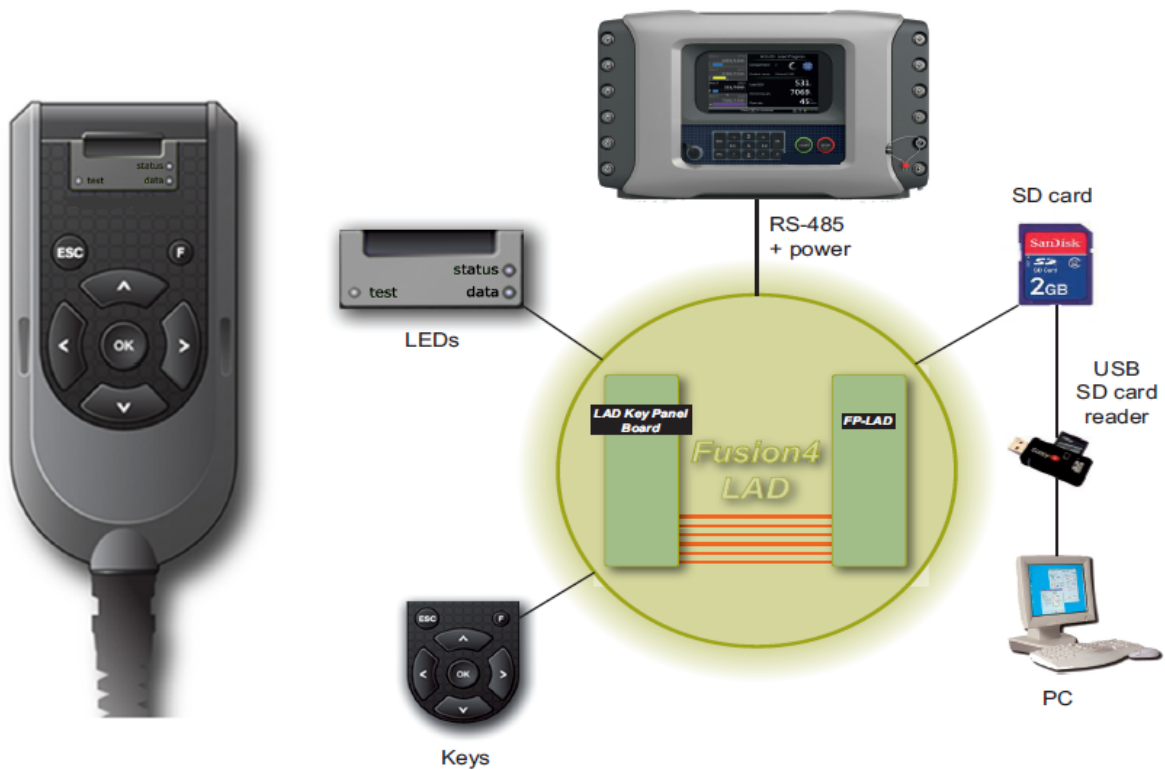

4.3.1.2 General LAD Application Overview

Figure 4-2: General LAD Application Overview

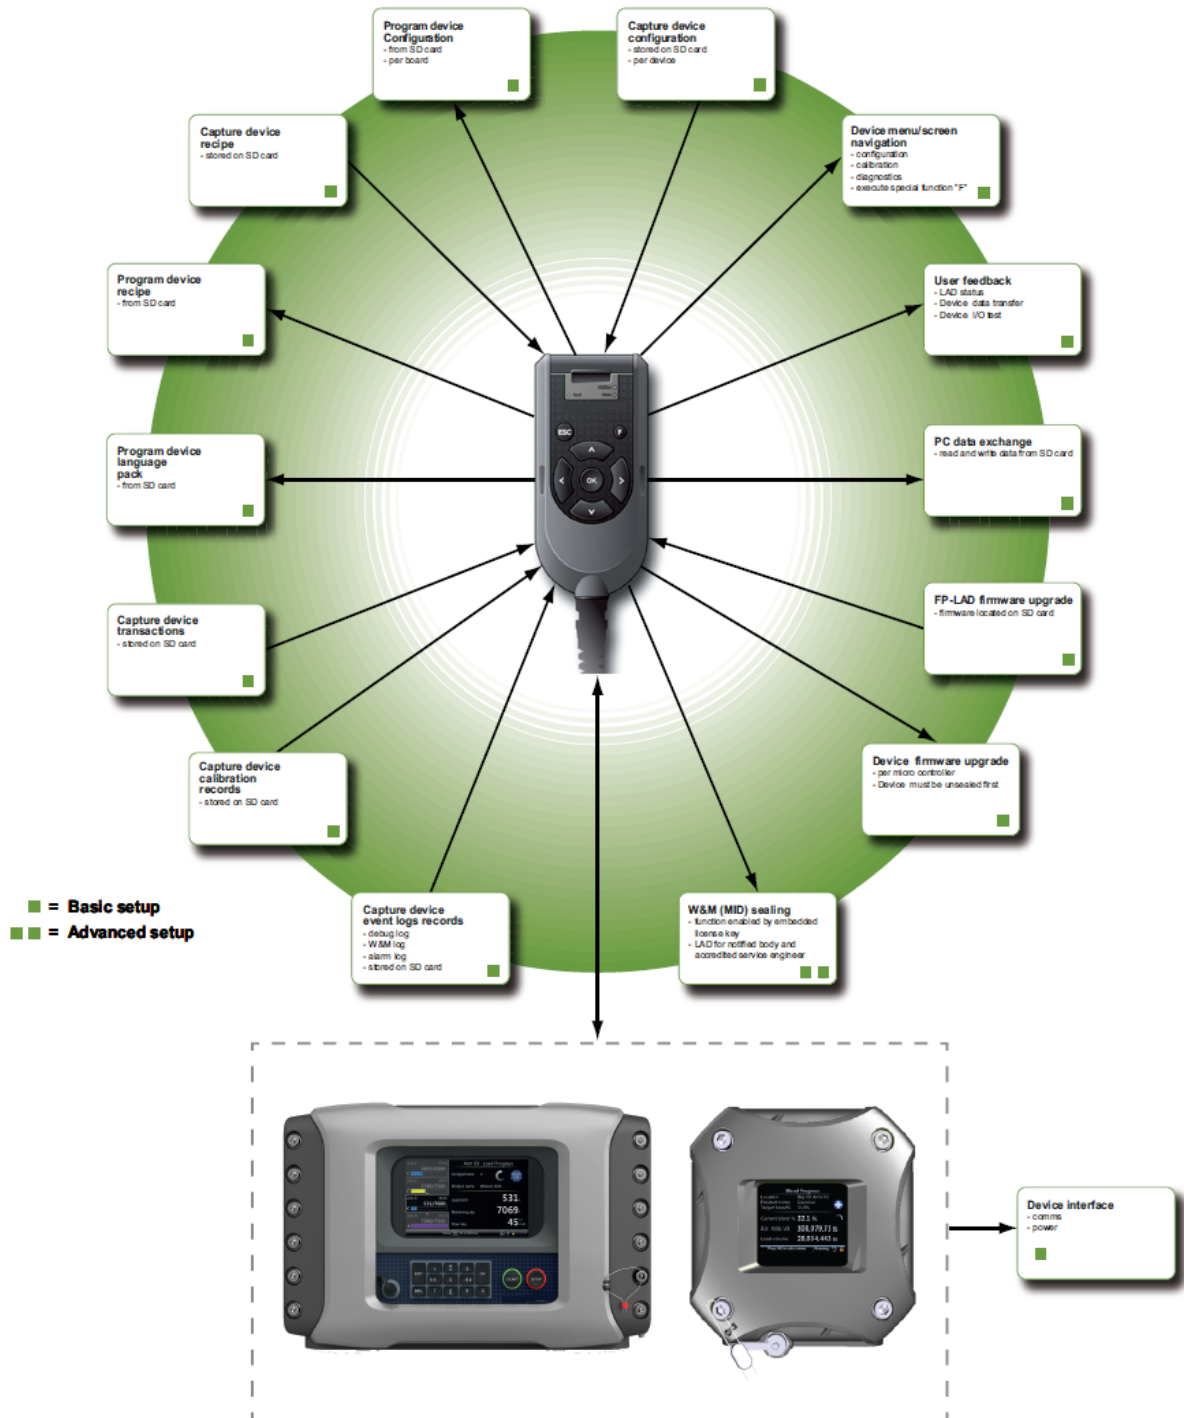

4.3.2 Navigation with Fusion4 LAD

4.3.2.1 Basic Navigation (Fusion4 LAD)


See the following figure for the basic navigation of the Fusion4 LAD.

Table 4-1: Basic navigation (Fusion4 LAD)

| Fusion4 LAD | |
|--|-------------|
|  | |
| | ^ = Up |
| | v = Down |
| | < = Left |
| | > = Right |
| | OK = Select |
| | ESC = Back |

4.3.2.2 LEDs (Fusion4 LAD)

Fusion4 LAD



| Button | Description |
|---------------------|--|
| status (dual-color) | <ul style="list-style-type: none"> green = OK red = Fault |
| data (amber) | ON = data transfer <div style="background-color: #e0e0e0; padding: 5px; margin-top: 5px;"> NOTE: Do NOT disconnect during data transfer. </div> |
| test (dual-color) | <ul style="list-style-type: none"> green = mapped I/O function has good health and is active. red = mapped I/O is inactive. red (blinking) = mapped I/O has bad health. off = no I/O mapping exists. |

4.3.2.3 Special Function Key on the LAD

User-defined LAD functions such as transferring transactions to the LAD, display of the diagnostics screen, and calibration wizard process can be mapped to the F key. You can configure the special function key through the HMI of the Fusion4 device. The Fusion4 LAD special function key may not be applicable for all Fusion4 devices.



4.3.2.4 SD Card

NOTE: Format the SD card before using it for the first time. See [Section 4.5.4.1.6: Format SD Card](#), for more information about formatting the SD card.

The LAD contains an SD card slot, which is located at the top, front face of the LAD. See the following figure.

Figure 4-3: SD Card Location in LAD (lid opened)



- The SD card uses a FAT file system to allow interpretability with Microsoft Windows platforms.
- The SD card is used for the storage of the following:
 - LAD firmware
 - LAD license key
 - Generic recipes
 - Configuration templates
 - Device firmware
 - Language packs
 - Transaction data
 - Calibration data
 - Configuration data
 - Recipes
 - Alarm logs
 - Event logs
 - W&M logs (SSC-B only)

4.3.2.4.1 Product Type Selection

The selection of an SD card for the LAD is important. Due to the intrinsically safe design of the LAD, the power drawn by the SD card is strictly limited. For this reason, commercially available SD cards are NOT recommended, as the specification and construction of these devices change frequently.

The following cards are recommended.

Table 4-2: Recommended SD cards

| Manufacturer | Series | Type | Capacity | Part Number |
|--------------|------------|------|----------|-----------------|
| SanDisk | Industrial | SD | 8GB | SDSDAF3-008G-XI |
| Kingston | Industrial | SD | 8GB | SDIT/8GB |

You are allowed to use SD cards not included in the above table, but they must conform to the following specifications.

| Type | SD or SDHC |
|-----------------------|-------------------------------------|
| Operating temperature | -20 °C to +65 °C [-4 °F to +149 °F] |
| Maximum current | 70 mA |

NOTE: Guidant does NOT provide support for any cards not listed in the above table.

NOTE: The miniSD and the microSD cards fitted in an SD adaptor must NOT be used in the LAD.

4.3.2.4.2 Directory Structure and File Organization

Figure 4-4: Generic Directory structure and file organization



4.3.2.4.3 Guidelines

- All files have *.xml-format and -extention (except Firmware and License).
- File name identification (file-ID) are as follows:
 - T = Transactions
 - C = Calibrations
 - A = Alarm Logs
 - W = W&M Logs
 - D = Event Logs
 - R = for Recipes
- File name format for Transactions are as follows:
 - <device-type>-<serial number>-<file-id>-<transaction-id>.xml
 - Example: MSC-L-54639823-T-0123456789.xml
- File name format for Calibrations are as follows:
 - <device-type>-<serial number>-<file-id>-<calibration-id>.xml
 - Example: MSC-L-54639823-C-0123456789.xml
- File name format for Alarm logs are as follows:

- <device-type>-<serial number>-<file-id>.xml
- Example: MSC-L-54639823-A.xml
- File name format W&M logs:
 - <device-type>-<serial number>-<file-id>.xml
 - Example: SSC-B-54639823-W.xml
- File name format for Debug logs are as follows:
 - <device-type>-<serial number>-<file-id>.xml
 - Example: MSC-L-54639823-D.xml
- File name format for Recipes are as follows:
 - <device-type>-<file-id>-<recipe-name>.xml
 - Example: MSC-L-R-E20.xml
- File name format for Configurations are as follows:
 - <user defined string>.xml
 - Example: MY_CONTROLLER_1.xml

NOTES:

1. Generic files built/edited in a computer environment can differ from the previous format.
2. Generic files built/edited in a computer environment **MUST BE PLACED** in the corresponding "Generic" folders as mentioned previously, otherwise they cannot be selected during the Fusion4 device-LAD interaction.
3. Firmware files **MUST** be placed in the corresponding folders for the LAD and the MSC-L, otherwise they cannot be selected during the Fusion4 device-LAD interaction.

4.4 Menu and Navigation

4.4.1 General

The menu-based Human Machine Interface (HMI) on the Fusion4 devices, is intuitive and informative. With the HMI interface you can operate, configure, and service the Fusion4 devices.

The Main Menu consists of colored icons and logically structured submenus.

4.4.2 Key Benefits of the HMI on the Main Menu

Following are the key benefits of the menu-based HMI of the MSC-L.

- Clean, intuitive, and informative user interface
- It is not necessary to memorize parameter codes and enumeration value
- Wizard-based configuration for meter calibration
- Flexible I/O configuration
- Diagnostic screens
- Record-based approach to transactions, recipes, and calibrations to make reuse possible
- Interoperable with Fusion4 LAD
- Graphical user interface for Fusion4 LAD

4.5 Device Commissioning


4.5.1 Using the Menu

4.5.2 LAD Functions of SSC-A and SSC-B




NOTE: Only when the LAD is connected!

- This is the user's interface to the following LAD specific functionality.
 - Firmware download to the SSC and the LAD
 - Configuration of the Test LED
 - Configuration of the LAD's special function key
 - LAD information
 - W&M sealing
 - Format SD card

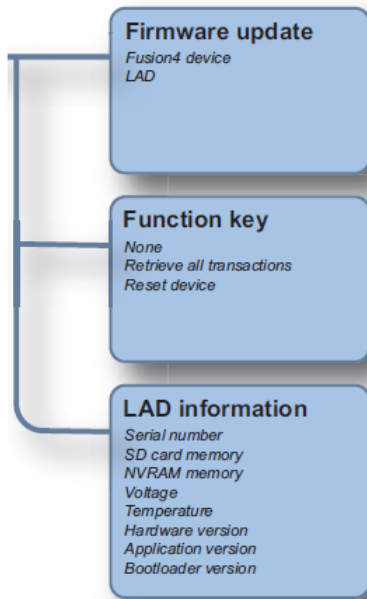

4.5.2.1 General

In the LAD Functions menu, various typical LAD functions and activities can be invoked.

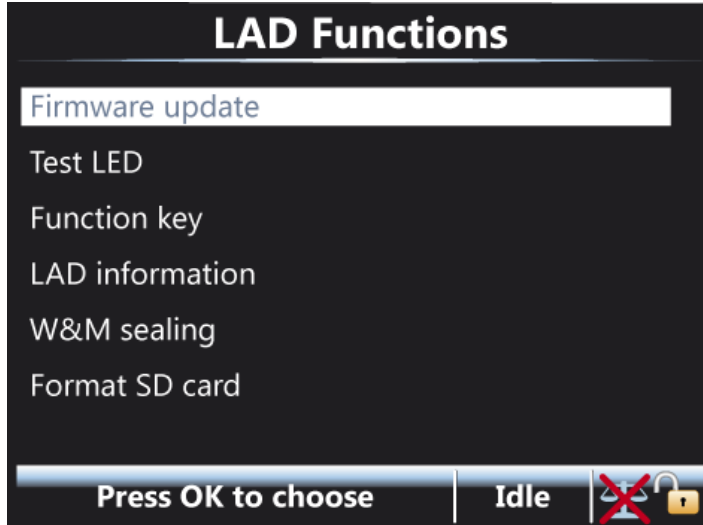

4.5.2.1.1 Firmware Upgrade

NOTE: Remove the old files that are available in this folder from previous upgrades before updating the files.

Perform the following steps to upgrade the device using the LAD.

1. Replace the following updated firmware files received in the \Honeywell\SSC-A\Generic\Firmware\ directory.

Replace the following updated firmware files received in the \Honeywell\SSC-B\Generic\Firmware\ directory.

- FS-HMI-ARM-APP_DSP_.bin
- FS-HMI-FC-APP.mhx
- FS-STREAM-FC-APP.mhx
- FS-OPTION-FC-APP.mhx (Optional)

NOTE: FS-OPTION-FC-APP.mhx file is only required if the Option card is installed in the device.

2. Plug-in the LAD to the SSC and make sure the SD card is in the LAD before plugging the LAD.


A green status light on the LAD indicates that the SD card is inserted correctly and a red status light indicates that the SD card is missing.

NOTE: Update the firmware only when the device is not being used.


Do not insert or remove the SD card when the LAD is connected to the device and do not remove the LAD when an upgrade file is downloading.

Do not perform the update procedure when there is a chance of a power outage as this can cause problems and/or make the device unusable.

3. Select <Firmware update> to either update the firmware of the SSC boards or the LAD firmware itself.

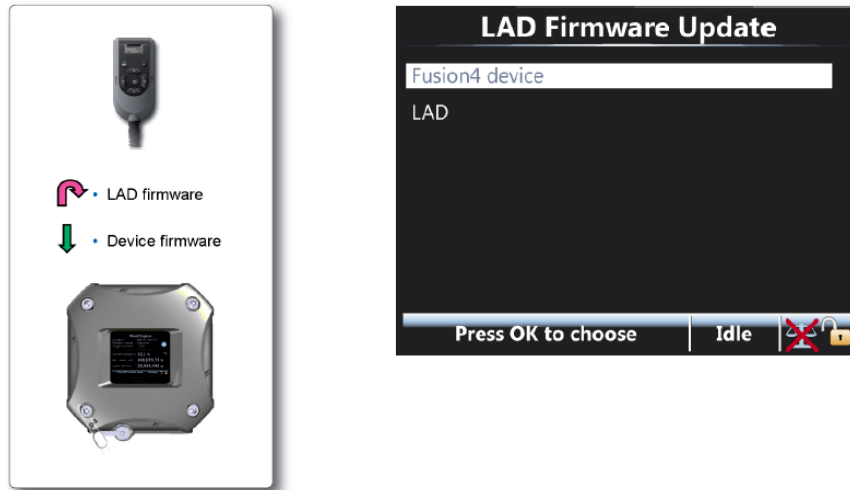

4. Select <Fusion4 device>. The Transfer Select Item screen appears.

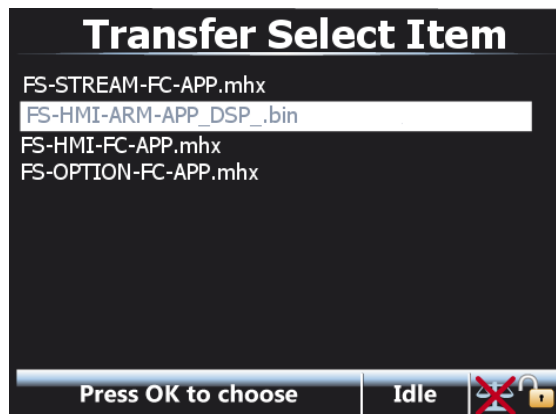

Select the firmware files in the following order to update the files.

1. FS-HMI-ARM-APP_DSP_.bin
 - The total time for the firmware update file is 6 minutes approximately.
 - After the file is updated, remove and plug the LAD again to reinitialize it. If you do not plug the LAD again, then the device may not recognize the SD card when the next file is downloaded.
2. FS-HMI-FC-APP.mhx

- The total time for the firmware update file is 3 minutes approximately.
 - After the file is updated, remove and plug the LAD again to reinitialize it. If you do not plug the LAD again, then the device may not recognize the SD card when the next file is downloaded.
3. FS-STREAM-FC-APP.mhx
- The total time for the firmware update file is 9 minutes approximately.
 - After the file is updated, acknowledge and reset the alarm by performing the following steps.
 - a. Select <Active alarms> from the Diagnostics main menu.
 - b. Select <Reset Device> to reset the device.
4. FS-OPTION-FC-APP.mhx (if required)
- The total time for the firmware update file is 6 minutes approximately.
 - Update the file only if it is available.

Once the firmware update is successful, a message is displayed confirming the same.

If one of the following alarms appear, ignore the alarm and re-enable the device once.

- "Stream board missing" when updating the stream board firmware.
- OR
- "Option board missing" when updating the option board firmware.


NOTE: If the Fusion4 Portal is interfaced with the SSC-A or SSC-B device, ensure that there are no unprocessed transactions from the Portal side before starting the firmware update sequence.

4.5.2.1.1.1 Verify the Firmware Update

Verify the following to make sure that the files are updated.

1. Select <Versions> from the Info main menu to ensure the latest version is available in the column App. ver.

| Firmware versions | | | |
|--------------------------|------------------|------------------|-------------------|
| Board | Boot ver. | App. ver. | App. build |
| HMI FC | A10020 | A2310 | 1207 |
| HMI ARM | A2310 | A2310 | 1207 |
| STREAM | B10001 | A2310 | 707 |
| OPTION | B10001 | A2310 | 207 |

Idle 

2. Verify the parameter settings to check if they are the same as they were previously in the old firmware.
3. Select <System health> from the Diagnostic main menu. Select one of the boards and then select <Ok>. The test should display, "Good/No Error".

4.5.2.1.2 Test LED, Function Key, and LAD Information Submenus


In the <Test LED> submenu (see screen below), the following diagnostics or I/O tests can be visualized on the "Test" LED of the LAD.

- HMI board
- Device manager
- Alarm manager
- Transaction manager
- Batch manager
- HMI module
- Display manager
- LAD
- STREAM board
- Comms
- D1 AC 2
- DI DC 1
- DI DC 2
- DO AC 1


- DO AC 2
- PO DC 1
- PO DC 2
- PI
- DI AC1
- DO EMR
- Blend manager
- Additive manager
- STREAM module
- OPTION board
- OPT Comms
- OPT DO EMR
- OPT DI AC 1
- OPT DI AC 2
- OPT DI AC 3
- OPT DI AC 4
- OPT AO DC
- OPT RTD
- OPT DO AC

NOTE: Test LED functions are inactive while retrieving other records from the LAD.

- In the <Function key> submenu, specific functions can be programmed to the “F key” of the LAD, in order to achieve a much quicker operation of the SSC.
- This configuration is saved on the LAD, so changes made to the function key works with other devices as well.

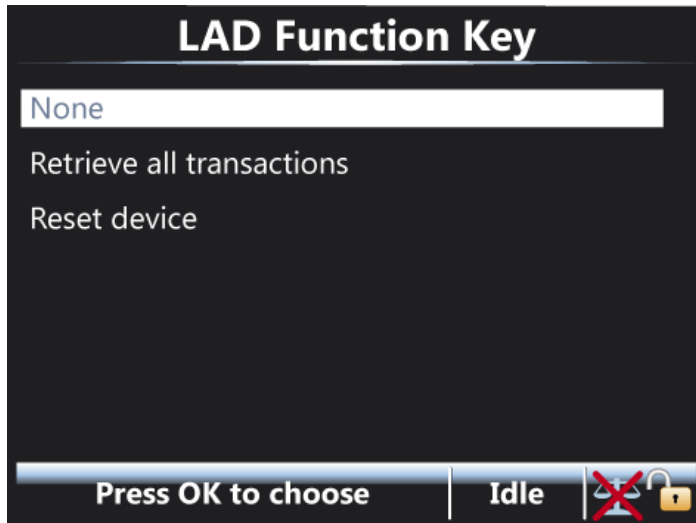


- Select the <LAD information> submenu which provides the following relevant LAD information and diagnostics.
 - Serial number
 - SD card memory
 - NVRAM memory
 - Voltage
 - Temperature
 - Hardware version
 - Application version
 - Bootloader version

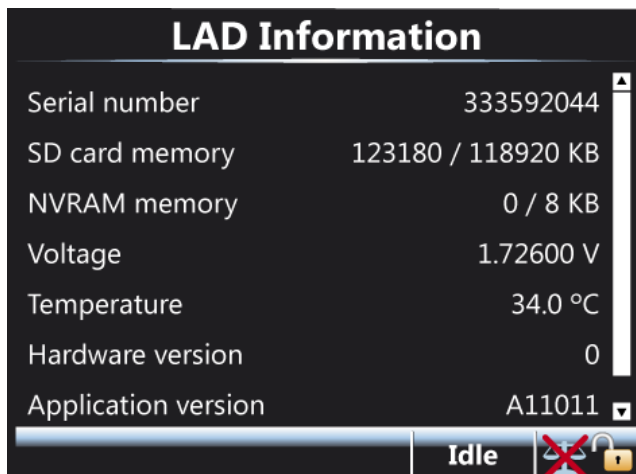


4.5.2.1.3 Format SD Card

With this option the SD card of the LAD can be formatted.

CAUTION: All content is erased!

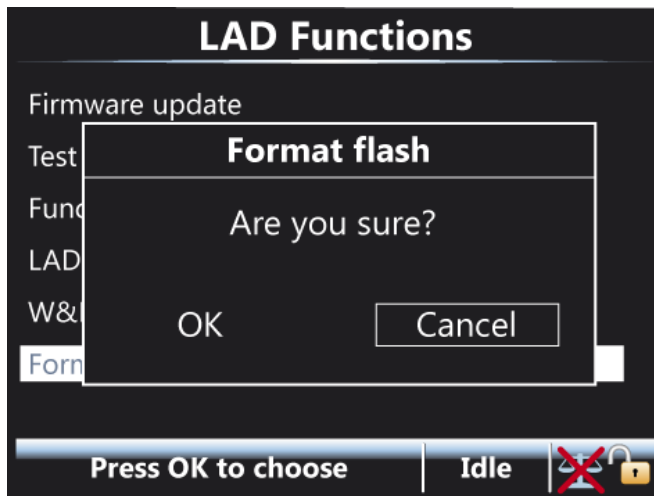


4.5.3 LAD Functions of MSC-A

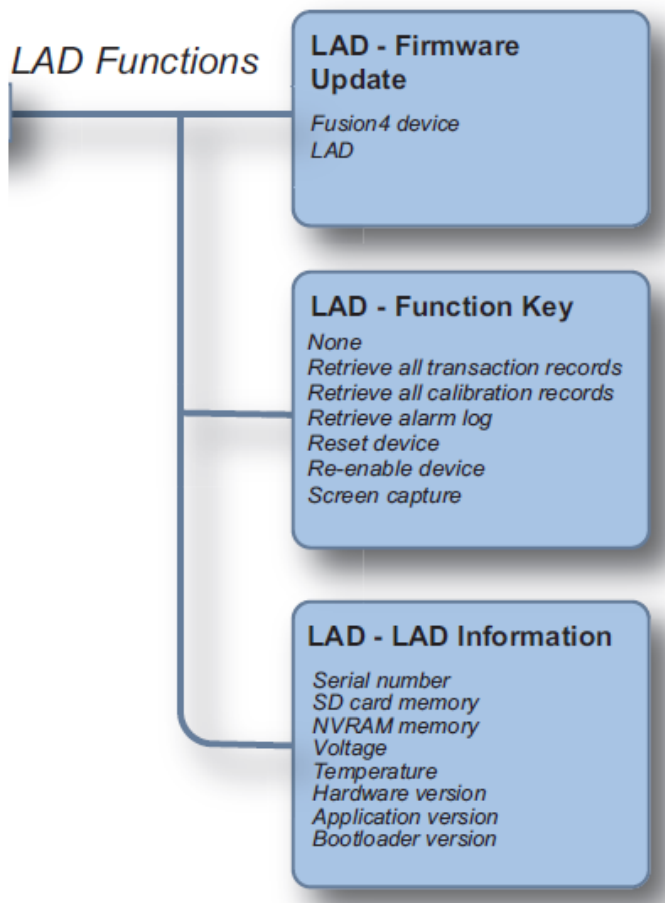

NOTE: LAD functions are available only when LAD is connected to the MSC-A.

Figure 4-5: LAD Icon

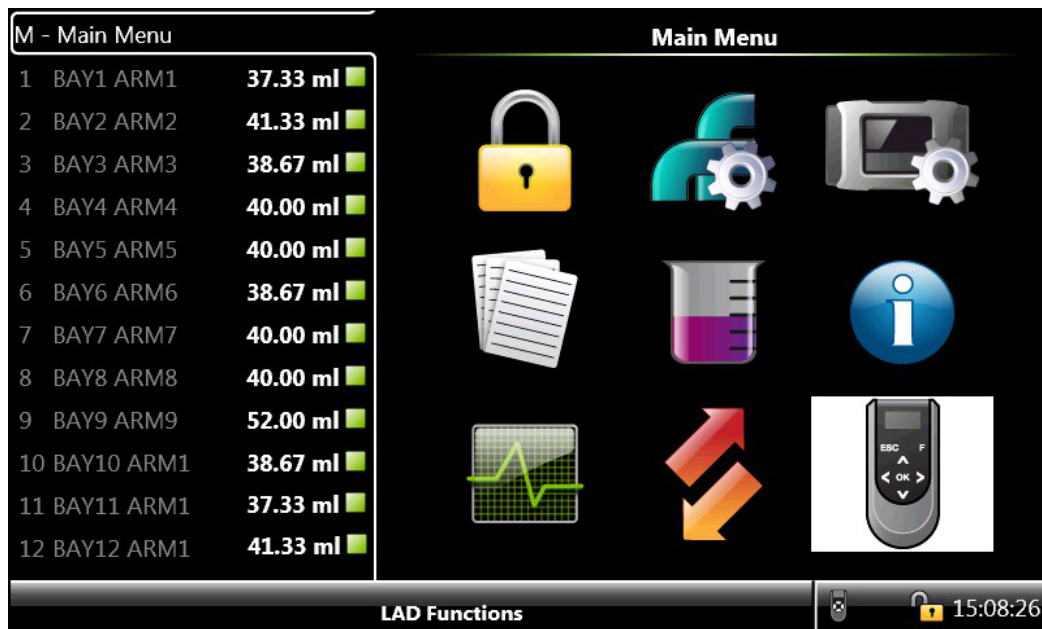

LAD functions provide the following LAD functionalities.

- Facility to download the firmware in the MSC-A device and LAD.
- Facility to navigate the screen.
- Configuration of the Test LED.
- Configuration of LAD's special function key.
- Information about LAD.
- Facility to format SD card.
- W&M (MID) sealing.

4.5.3.1 General

From the Main Menu screen, select LAD icon.

The LAD function screen appears, which displays the various LAD functions and their activities.



4.5.3.1.1 Firmware Update

NOTE: Remove the old files that are available in Honeywell\MSC-A\Generic\Firmware\ directory from previous upgrades before updating the files.

To update the firmware using LAD.

1. Replace the following updated firmware files received in the Honeywell\MSC-A\Generic\Firmware\ directory.

- FM-ARM-FC-APP.bin
- FM-HMI-FC-APP.bin
- FM-HMI-FC-FPGA.bin
- FM-HMI-FC-IMG.bin
- FM-IN-OUT-APP.bin (optional)

- **NOTE:** FM-IN-OUT-APP.bin file is only required if the CAN-IN-OUT-MSC card is installed in the device.

2. Connect LAD to the MSC and make sure the SD card is inserted in LAD before connecting LAD.


A green status light on LAD indicates that the SD card is inserted correctly and a red status light indicates that the SD card is missing.

NOTE:


- Update the firmware only when the device is not being used.
- Do not insert or remove the SD card when LAD is connected to the device and do not remove LAD when an upgrade file is downloading.
- Do not perform the update procedure when there can be a power outage, as this can cause problems and/or make the device unusable.

3. From the LAD screen, select <Firmware update> to either update the firmware of the MSC boards or LAD firmware itself.

The LAD - Firmware Upgrade screen appears.

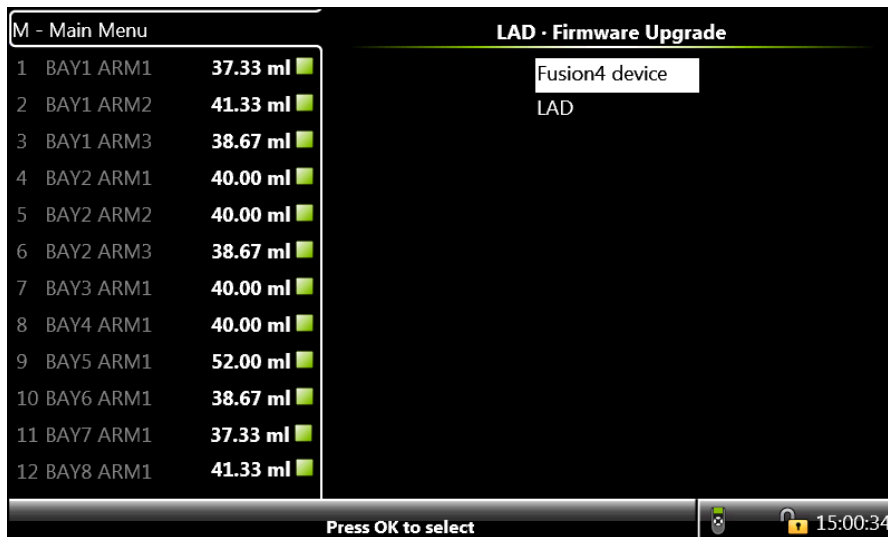


4. Select <Fusion4 device> to update the files. The Select File screen appears.

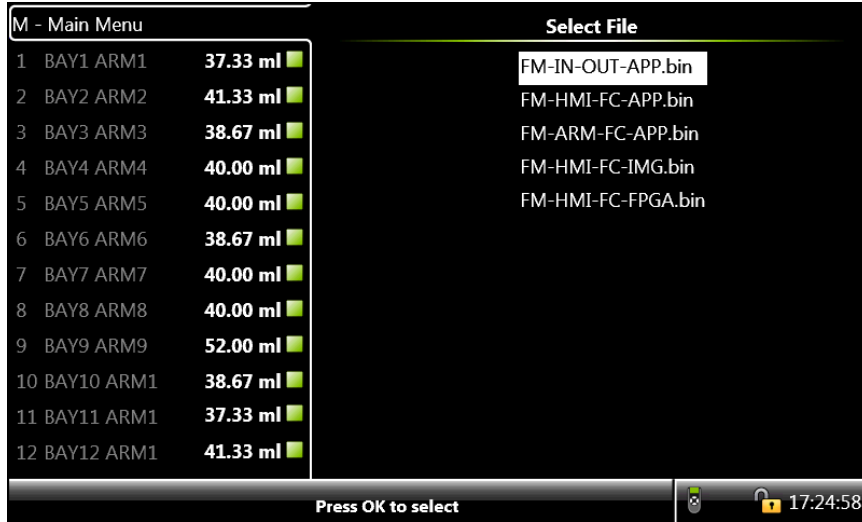

5. From the Select File screen, select the firmware files in the following order to update the files.

The Transfer Progress screen appears for the particular file selected, displaying the progress of the file download and the status of the installation in LAD.

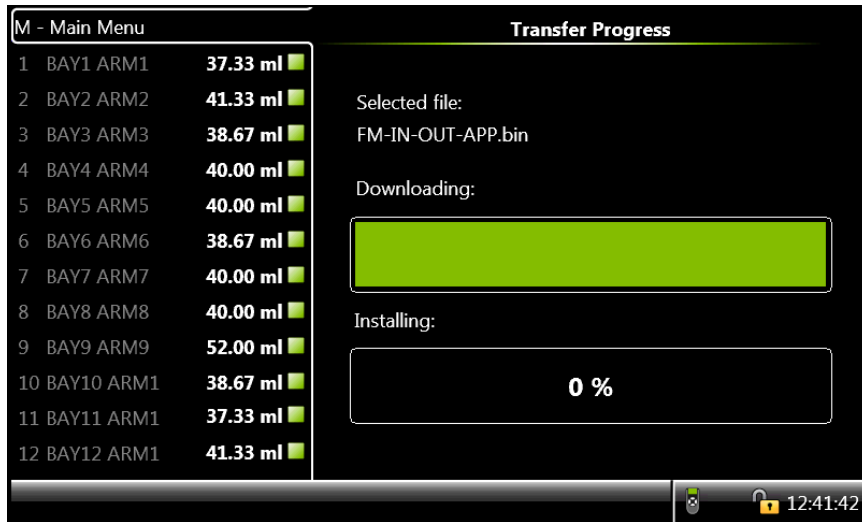

- a. FM-IN-OUT-APP.bin (if required)


- The total time for the firmware update file is 35 seconds approximately.
- If there are more than one CAN-IN-OUT-MSB boards, firmware on all those boards gets updated simultaneously.
- Update the file only if it is available.

- b. FM-ARM-FC-APP.bin
 - The total time for the firmware update file is 2 minutes approximately.
 - If there are more than one CAN-ARM-MSB boards, firmware on all those boards are updated simultaneously.
 - c. FM-HMI-FC-FPGA.bin
 - The total time for the firmware update file is 3 minutes approximately.
 - Update the file only if it is available.
 - d. FM-HMI-FC-IMG.bin
 - The total time for the firmware update file is 3 minutes approximately.
 - Update the file only if it is available.
 - e. FM-HMI-FC-APP.bin
 - The total time for the firmware update file is 3.5 minutes approximately.
6. **NOTE:** Update the files in above sequence, unless mentioned in the release notes.

4.5.3.1.2 Verify the Firmware Update

Verify the following to make sure that the files are updated.

1. On the Module Info screen, make sure that the latest version is available in the column App. version, as shown in the following screen.

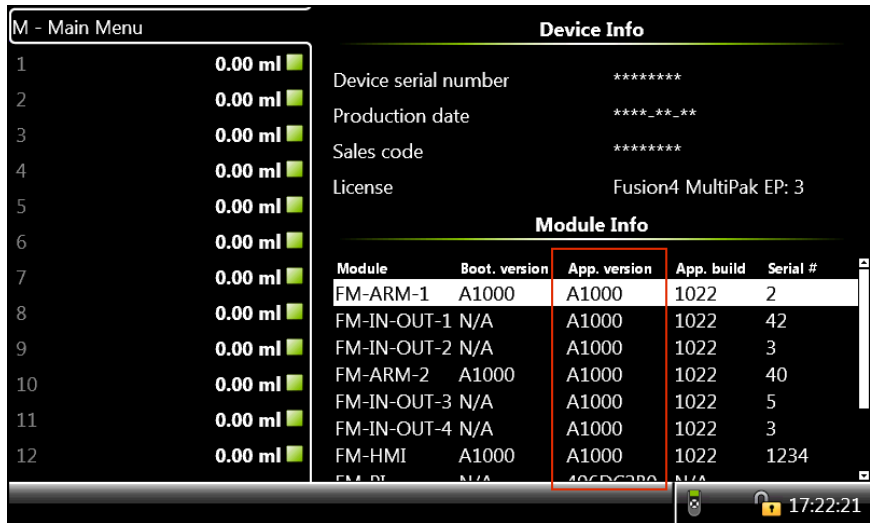


2. Verify the parameter settings to check if they are the same as they were in the previous old firmware.
3. From the Diagnostic screen, select <System health> on any one of the boards and then select <OK> on the IR controller or LAD. The test "Good/No Error" should be displayed on the screen, as illustrated in the following figure.



4.5.3.1.3 Test LED and LAD Information Submenus

From the LAD screen, select <Test LED> to view the diagnostics or the I/ O tests on the "Test" LED of LAD.

The LAD - Test LED screen appears, which displays the I/O tests available on the MSC-A device.

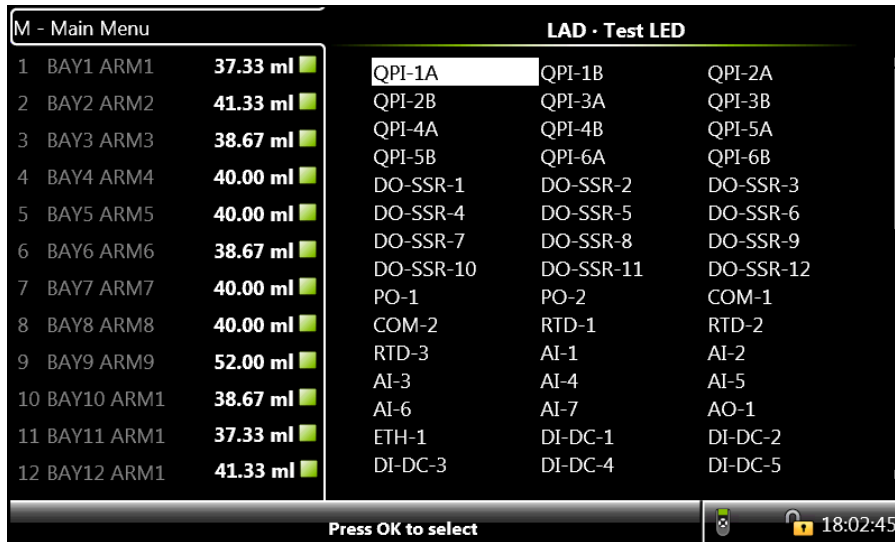

NOTE: The Test LED on the LAD displays the status of the health of the selected I/O.


Select the status of the I/O which is displayed on the Test LED of LAD, and select <OK>. The Test LED is red if the health of the assigned I/O is bad, and is green if the health of the assigned I/O is good.

4.5.3.2 Function Key

From the LAD screen, select <Function key> to specify the functions that can be programmed to the function "F" key on LAD to achieve a quicker operation of the MSC-A.

The LAD - Function Key screen appears, which specifies the functions that can be programmed.


The configuration is saved on LAD. Changes made to the function key works for other Fusion4 devices also.

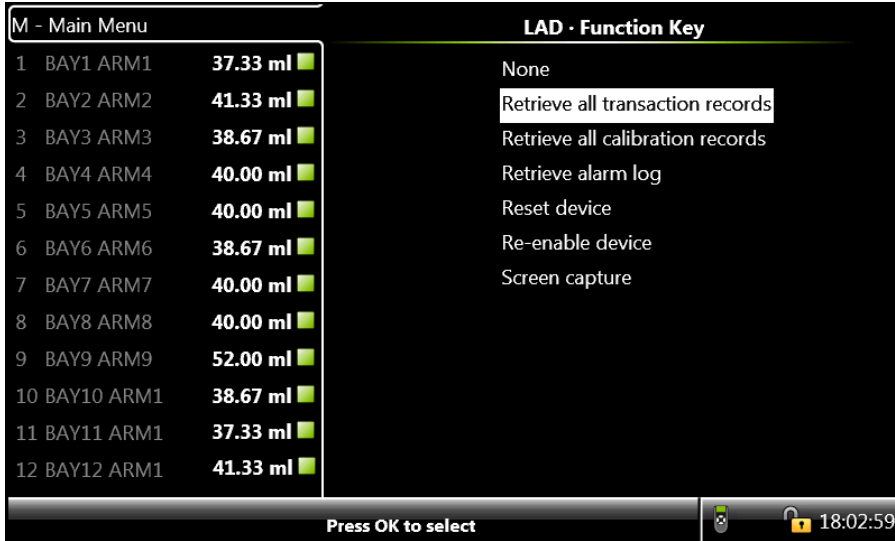

4.5.3.2.1 LAD Information


From the LAD screen, select <LAD information>.

The LAD - LAD Information screen appears which displays the relevant LAD information and diagnostics of LAD.

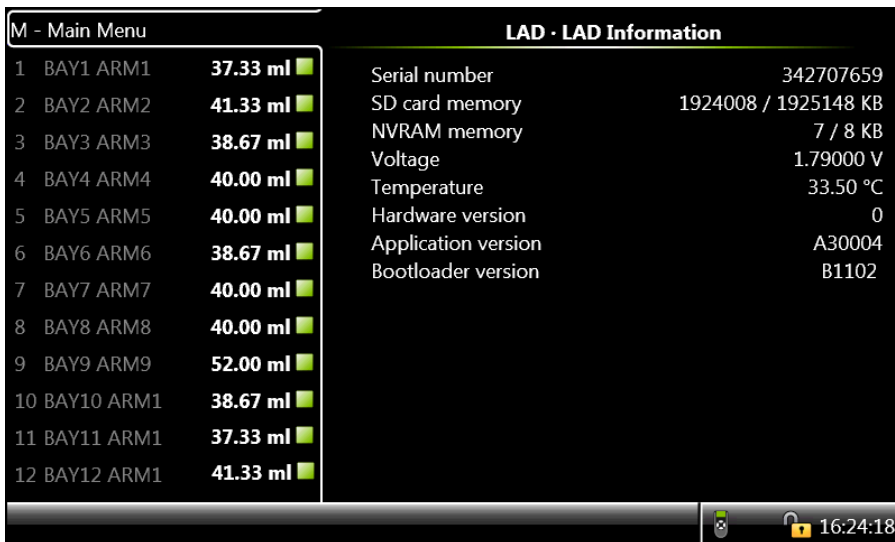

4.5.3.2.2 Format SD Card

From the LAD screen, select <Format SD card> to format the SD card of the LAD. The following dialog box appears.

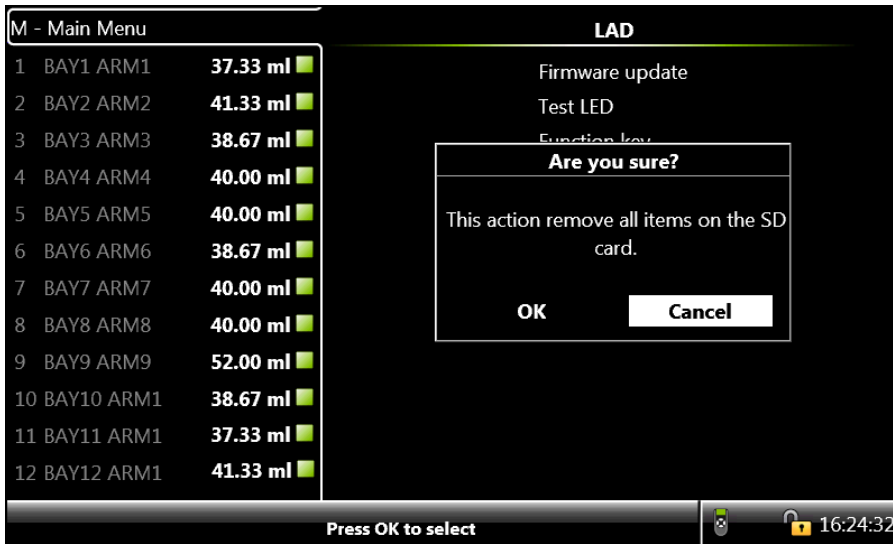


CAUTION: All content is erased if you select OK.

Perform any one of the following.

- Click OK to erase all the content available in the SD card.


The LAD - Format SD Card screen appears, which provides the status of the format.

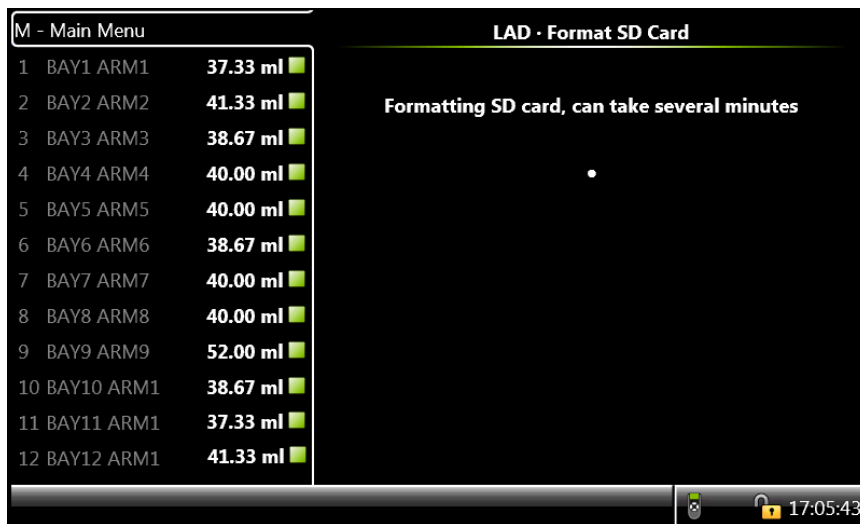

or


- Click Cancel to terminate the operation.

4.5.4 LAD Functions of MSC-L

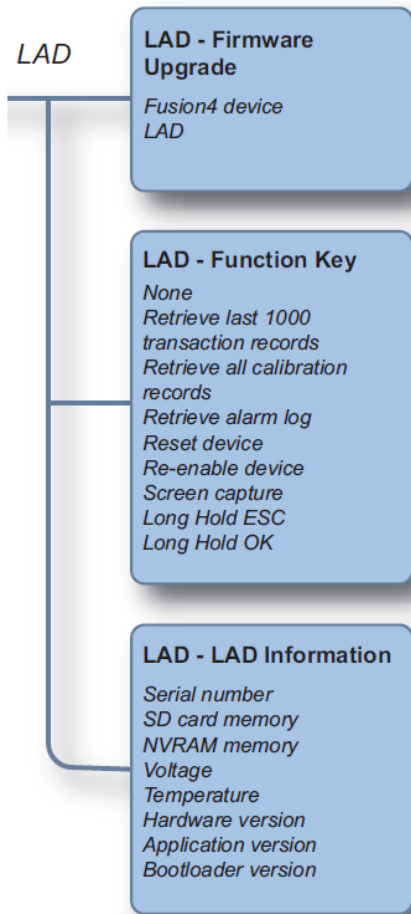

NOTE: The LAD functions are available only when the LAD is connected to the MSC-L.

Figure 4-6: FIGURE 4-7 LAD icon

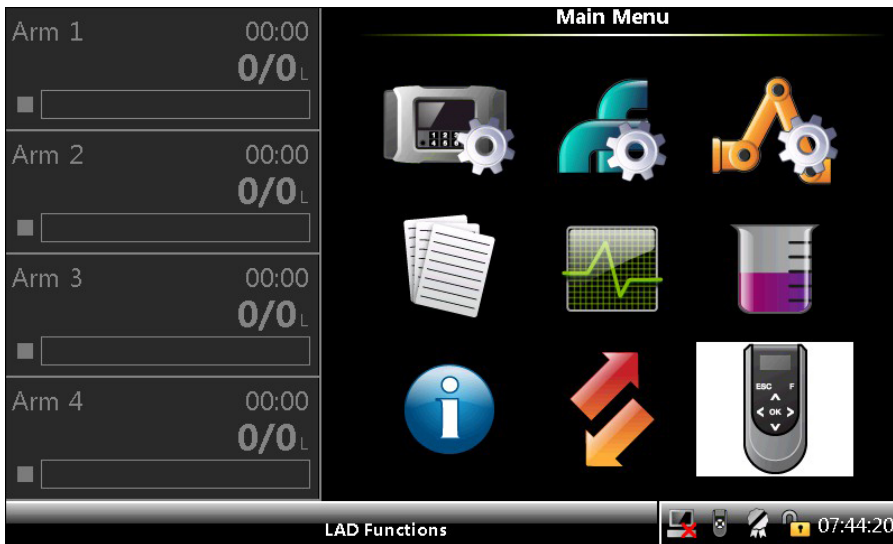

The LAD functions provide the following functionalities:


- Facility to download the firmware in the MSC-L and the LAD
- Facility to navigate the screen
- Configuration of the Test LED
- Configuration of the LAD's special function key
- Information about the LAD
- Facility to format the SD card

4.5.4.1 General

- On the Main Menu screen, select the LAD icon.

The LAD function screen appears, which displays the various LAD functions and their activities.

Figure 4-7: LAD functions

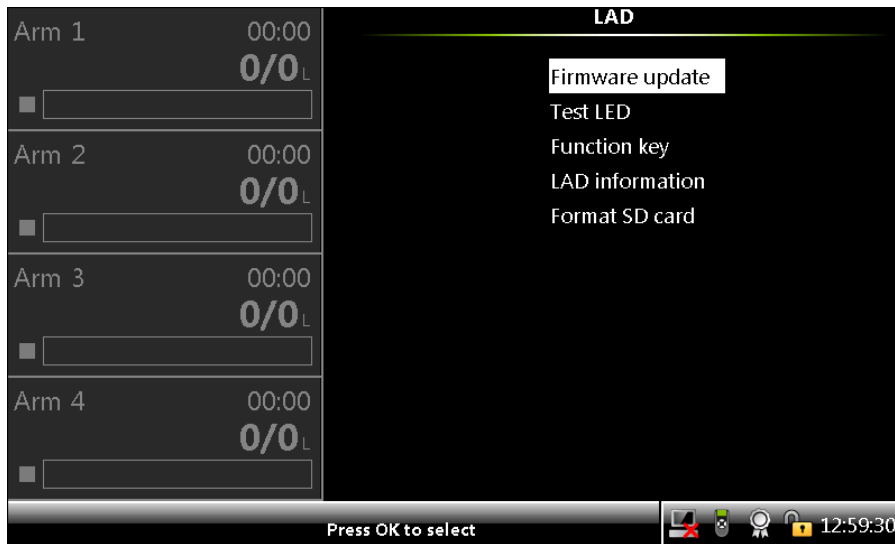

4.5.4.1.1 Firmware Update

NOTE: Remove the old files that are available in Honeywell\MSC-L\Generic\Firmware\ directory from previous upgrades before updating the files.

To update the firmware using the LAD

1. Replace the following updated firmware files in the Honeywell\MSC-L\Generic\Firmware\ directory.
 - FM-HMI-FC-FPGA.bin
 - FM-HMI-FC-IMG.bin
 - FM-IN-OUT-APP.bin (optional)
 - FM-ARM-FC-APP.bin
 - FM-HMI-FC-APP.bin

NOTE: The FM-IN-OUT-APP.bin file is only required if the CAN-IN-OUT-MS-C card is installed in the device.

2. Connect the LAD to the MSC-L and make sure that the SD card is inserted in the LAD before connecting.


A green status light on LAD indicates that the SD card is inserted correctly and a red status light indicates that the SD card is missing.

NOTE:

- Update the firmware only when the device is not being used.
- Do not insert or remove the SD card when the LAD is connected to the device and do not remove the LAD when an upgrade file is downloading.
- Do not perform the update procedure during a power outage, as this can cause problems and/or make the device unusable.

3. On the LAD screen, select <Firmware update> to either update the firmware of the MSC boards or LAD firmware itself

The LAD • Firmware Upgrade screen appears.

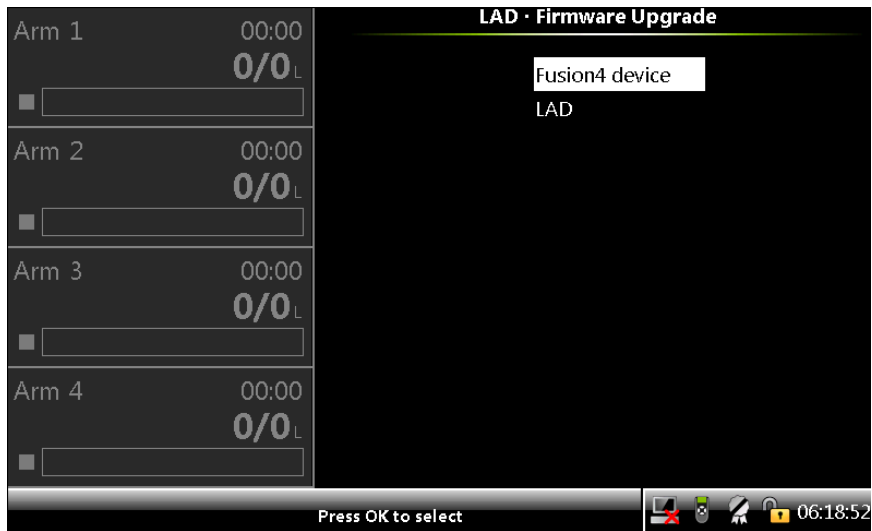

4. Select <Fusion4 device> to update the files. The Select File screen appears.



5. On the Select File screen, select the firmware files in the following order, to update the files.

The Transfer Progress screen appears for the particular file selected, displaying the progress of the file download and the status of the installation in the LAD.

- a. FM-IN-OUT-APP.bin (if required)

- The total time for the firmware update file is 35 seconds approximately.
- If there are more than one CAN-IN-OUT-MSC boards, firmware on all those boards gets updated simultaneously.
- Update the file only if it is available.

- b. FM-ARM-FC-APP.bin

- The total time for the firmware update file is 2 minutes approximately.
- If there are more than one CAN-ARM-MSC boards, firmware on all those boards are updated simultaneously.

- c. FM-HMI-FC-APP.bin

- The total time for the firmware update file is 3.5 minutes approximately.

- d. FM-HMI-FC-FPGA.bin

- The total time for the firmware update file is 3 minutes approximately.
- Update the file only if it is available.

e. FM-HMI-FC-IMG.bin


- The total time for the firmware update file is 3 minutes approximately.
- Update the file only if it is available.

NOTE: Update the files in the above sequence, unless mentioned in the release notes.

4.5.4.1.2 Verify the Firmware Update

Verify the following to make sure that the files are updated.

1. On the Module Info screen, make sure that the latest version is available in the column App. version, as shown on the Device/ Module Info screen.
2. Verify the parameter settings to check if they are the same as they were in the previous old firmware.
3. On the Diagnostic screen, select <System health> on any one of the boards and then select <OK> on the IR controller or the LAD. The test "Good/No Error" must appear on the screen, as shown in the Diagnostic - Module Health screen.

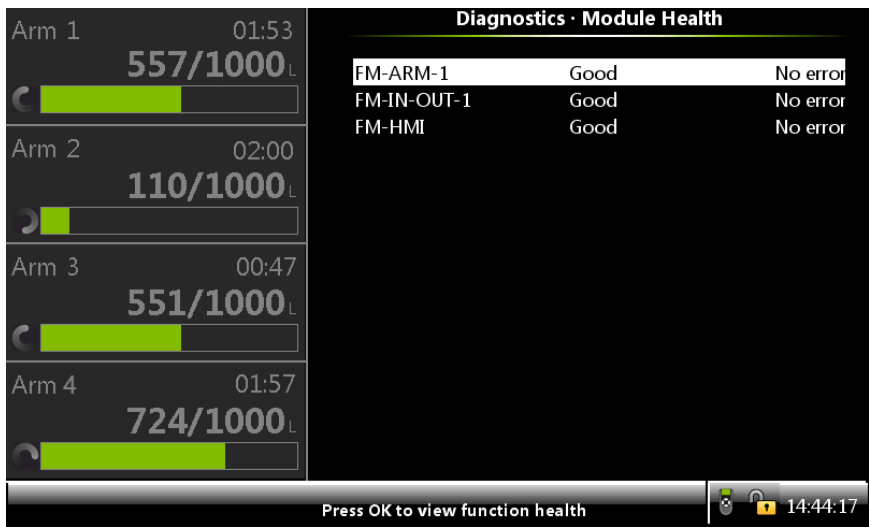

4.5.4.1.3 Test LED and LAD Information Submenus

On the LAD screen, select <Test LED> to view the diagnostics or the I/O tests on the “Test” LED of LAD.

The LAD • Test LED screen appears, which displays the I/O tests available on the MSC-L.



NOTE: The Test LED on the LAD displays the status of the health of the selected I/O.


Select the status of the I/O, which is displayed on the Test LED of LAD, and then select <OK>. The Test LED is red if the health of the assigned I/O is bad, and is green if the health of the assigned I/O is good.

4.5.4.1.4 Function Key

On the LAD screen, select <Function key> to specify the functions that can be programmed to the function “F” key on the LAD. This helps you to achieve a quicker operation of the MSC-L.

The LAD • Function Key screen appears, which specifies the functions that can be programmed.


The configuration is saved on the LAD. Changes made to the function key is applicable for other Fusion4 devices also.

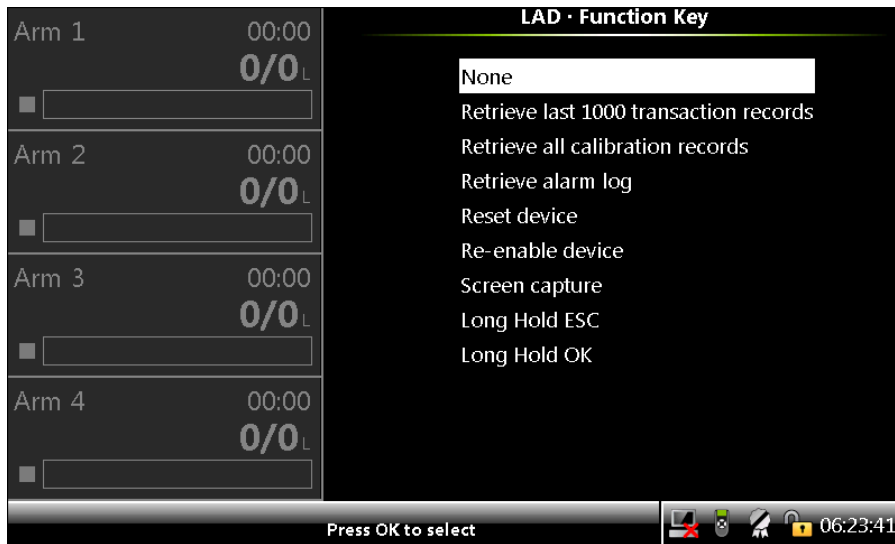

4.5.4.1.5 LAD Information


On the LAD screen, select <LAD information>.

The LAD · LAD Information screen appears which displays the relevant LAD information and diagnostics of LAD.

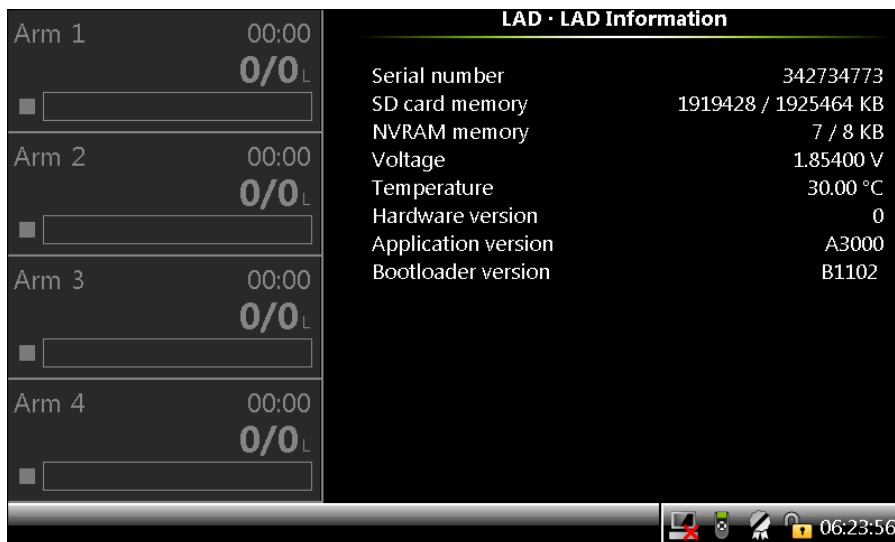

4.5.4.1.6 Format SD Card

1. On the LAD screen, select <Format SD card> to format the SD card of the LAD. The confirmation dialog box appears.

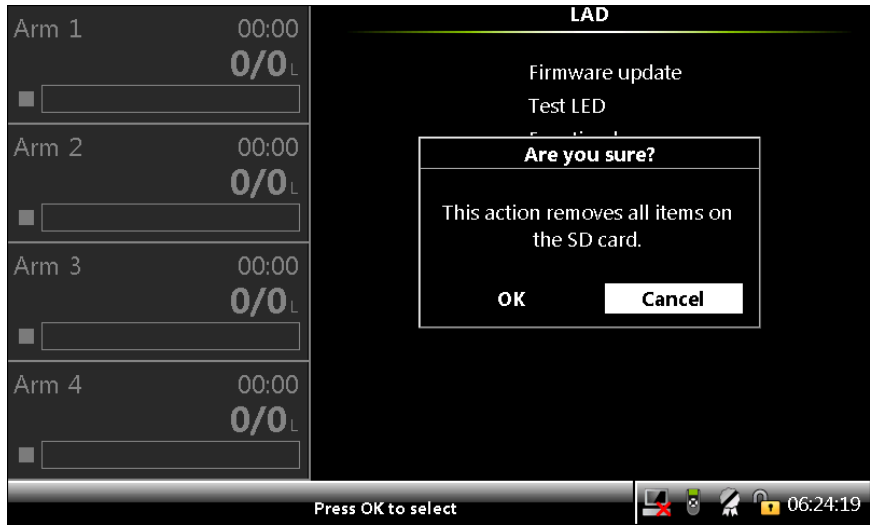

CAUTION: All content is erased if you select OK.


2. Perform any one of the following.
 - Click OK to erase all the content available in the SD card. The LAD. Format SD Card screen appears, which provides the status of the format.
 - or
 - Click Cancel to terminate the operation.

4.6 Transfer Calibration

4.6.1 Transfer Calibration of a SSC-A/SSC-B Device

From the Transfer screen, select <Calibration records> to view the calibration record details.

The Transfer - Calibration Records screen appears, which displays the options to transfer the calibration records.

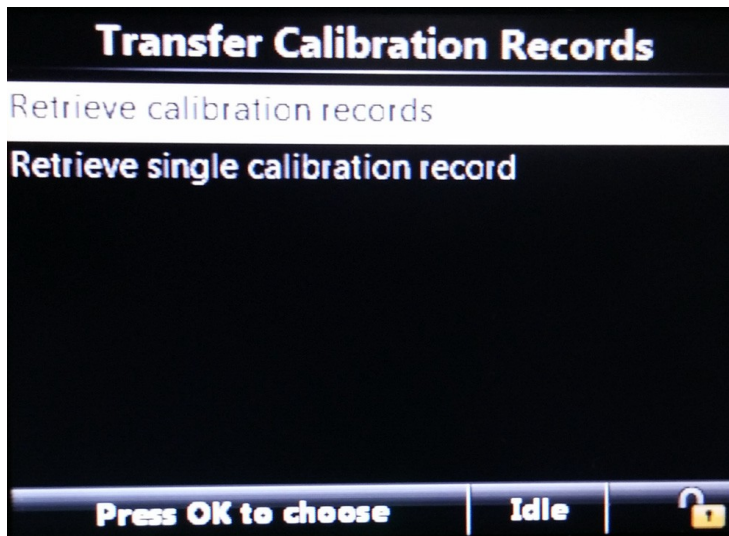


The following entities are available on the Transfer - Calibration Records screen.

- Range of records - This option allows you to select the desired range of calibration records from the available records.
- Single record - This option allows you to retrieve a single record. The calibration record is saved to the SD card on the LAD.

4.6.2 Transfer Calibration of a MSC-A/MSCL Device

From the Transfer screen, select <Calibration records> to view the calibration record details.

The Transfer - Calibration Records screen appears, which displays the options to view the calibration records.

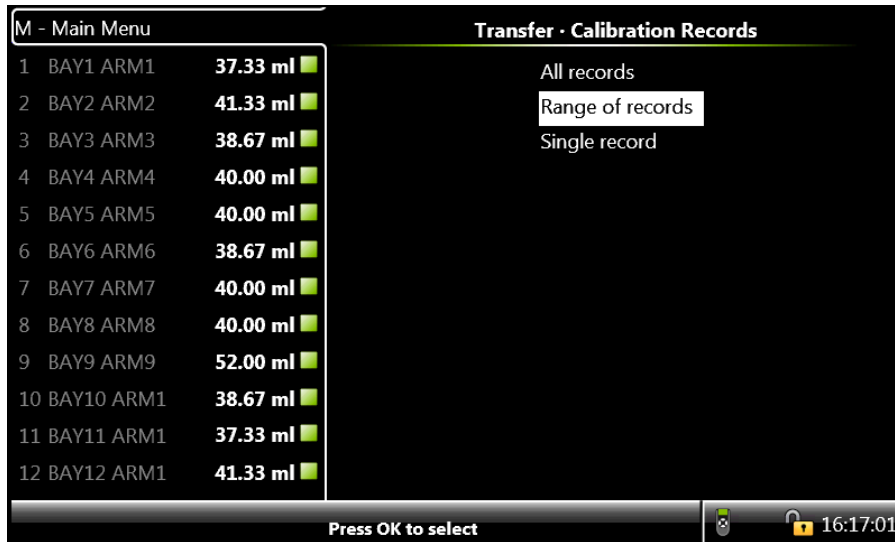


The following entities are available on the Transfer - Calibration Records screen.

- All records - This option retrieves all the calibration records available on the device.
- Range of records - This option allows you to select the desired range of calibration logs from the available records.
- Single record - This option allows you to retrieve a single record. The calibration record is saved to the SD card on the LAD.

4.7 Transfer Configurations

4.7.1 Retrieve SSC-A/SSC-B Device Configuration

- On a SSC-A/SSC-B device, Select <Configurations> from the Transfer main menu, the following screen appears.

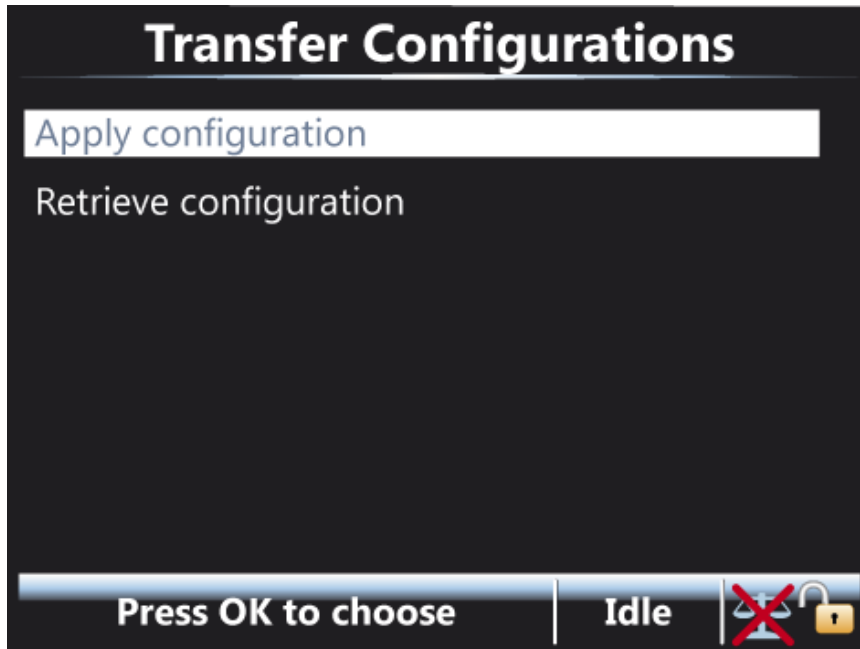

- <Apply configuration> - Select <Apply configuration> to install the configuration present on the SD card.
- <Retrieve configuration> - Select <Retrieve configuration> to save the current configuration on the SD card. The configuration is saved to the SD card on the LAD. Enter the name of the file you want to create on the SD card for the configuration setup and select Confirm.

The process takes approximately 1 minute to complete.

4.7.2 Retrieve MSC-A/ MSC-L Device Configuration

From the Transfer screen, select <Configurations> to install or retrieve the configuration on the SD card.

The Transfer - Configurations screen appears, which displays the options to install and retrieve configuration on the SD card.



The following entities are available on the Transfer - Configurations screen.


- <Install configuration> - Select this option to install the configuration present on the SD card.
- <Retrieve configuration> - Select this option to save the present configuration on the SD card. The configuration is saved to the SD card on the LAD. Enter the name of the file you want to create on the SD card for the configuration setup and select Confirm.

4.8 Transfer Transactions

4.8.1 Retrieving Transaction Records from SSC-A / SSC-B Device

The SSC-A/SSC-B provides an interface to read transaction records through FlexConn entities. These entities are used to transfer transactional data to the Fusion4 Portal through a serial link.

From the Transfer screen, select <Transaction records> to transfer transactional data. The following screen appears.

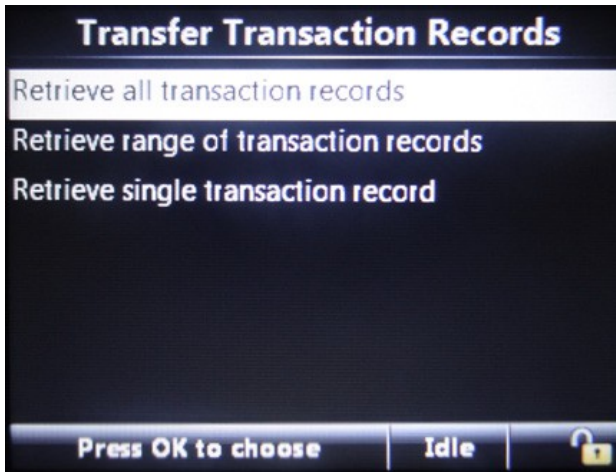

You can retrieve all transaction Records, records between a selected range, or a single record. The transaction record is saved to the SD card on the LAD.

Using the LAD or Fusion4 Portal, all archived transaction records can be retrieved. The definition of these records extends the definition used by communication.

Each transaction record includes: start date, start time, product volume, blend volume, alarms, percent deviation, and end time.

These parameters are “read only”, meaning they cannot be changed by you.

NOTE: The <Retrieve single transaction record> command cannot be used through Fusion4 Portal. This screen is only used by copying a transaction record to the LAD.

NOTE: All transactions are overwritten and the transaction cannot be retrieved through the Fusion4 Portal or the LAD. The user must have settled all transactions before the oldest one is automatically deleted and overwritten. Maximum 10.000 un-settled transactions can reside in the transaction memory of the SSC-A/SSC-B device.

4.8.2 Retrieving Transaction Records from MSC-A / MSC-L Device

The MSC-A/MSCL device provides an interface to read the transaction records through the FlexConn entities. These entities are used for transferring

transactional data to the Fusion4 Portal through a serial link.

From the Transfer screen, select <Transaction records> to transfer transactional data.

The Transfer - Transaction Records screen appears, which displays the various transaction record activities.



You can retrieve a selective range of records, or a single record. The transaction record is saved to the SD card on the LAD

NOTE: The <Single record> command cannot be used through Fusion4 Portal. The <Single record> screen is only used by copying a transaction record to LAD.

NOTE: All transactions are overwritten and the transaction cannot be retrieved through the Fusion4 Portal or LAD. You must settle all transactions before the oldest one is automatically deleted and overwritten. Maximum 10.000 unsettled transactions can reside in the transaction memory of the MSC-AMSC-L device.

4.9 Transfer MSC-L Load Profiles

- On the Main Menu screen, select the Transfer icon. The Transfer screen appears, which displays the various data sets that can be transferred between the MSC-L and the LAD.




- On the Transfer screen, select <Load Profiles> and then select <OK> on the LAD. The Transfer Load profiles screen appears, which displays options to transfer records.




The following transfer options appear on the Transfer - Load Profiles screen.

- All records - This option retrieves all the Load Profiles available on the device.
- Range of records - This option allows you to select the desired range of load profiles from the available records.
- Single record - This option allows you to retrieve a single load profile. Make a selection and the Logs. Load profiles screen appears.

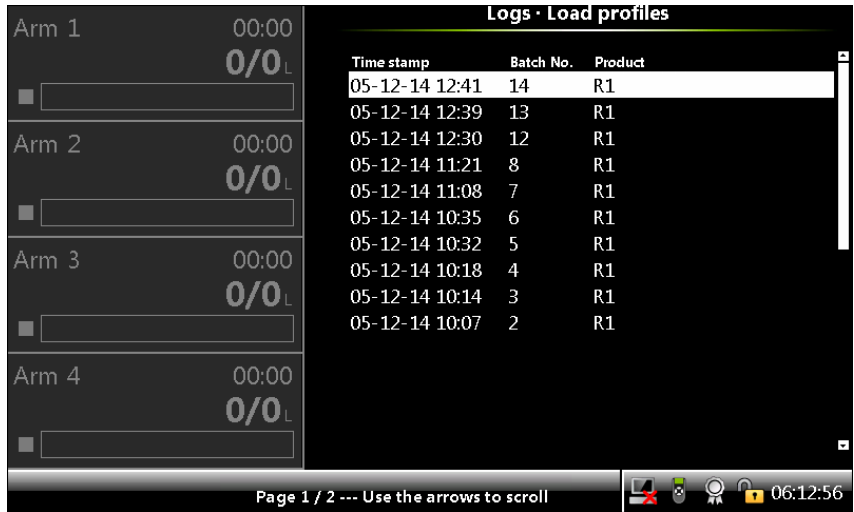


Select a batch from the log and a Logs. Load profile Batch screen appears with a load profile graph.

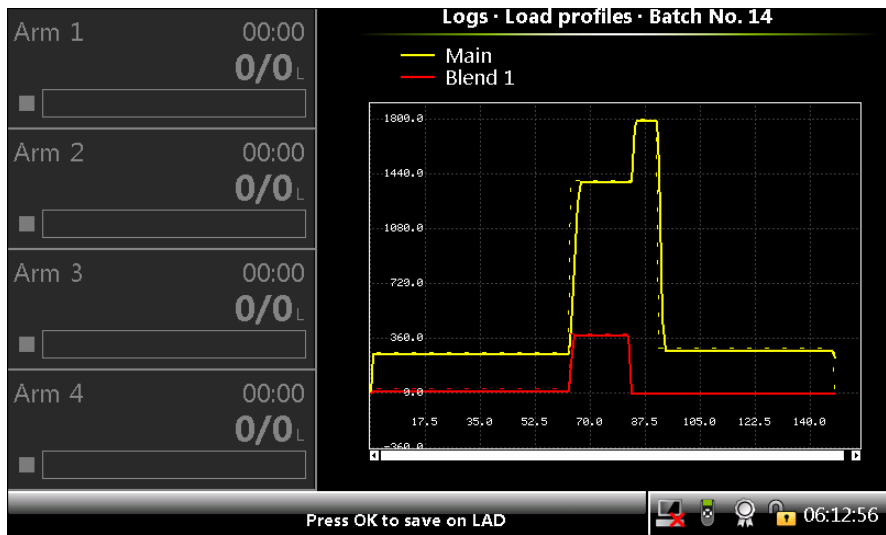

On the LAD device, Press <OK> to transfer the Load profile to the SD card on the LAD.

The Transfer. Transfer Progress screen appears and shows the progress of the transfer.

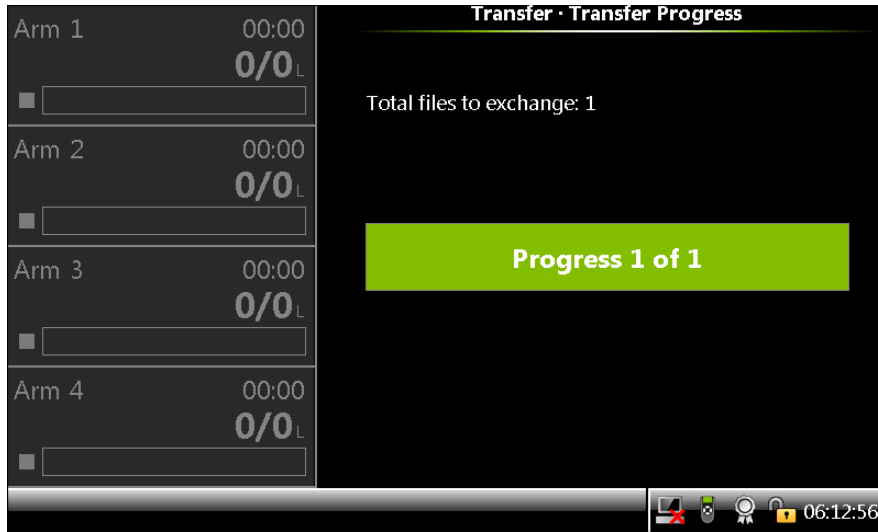

After the load profile is successfully transferred to the SD card, an 'Action successfully completed' pop-up appears.


4.10 Taking Screen-Shots on MSC-L

To make screen-shots using the LAD, the LAD function key needs to be programmed as "Screen capture". To do this:


- On the Main Menu screen, select the LAD icon.

The LAD function screen appears, which displays the various LAD functions and their activities.


On the LAD screen, select <Function key> to specify the functions that can be programmed to the function "F" key on the LAD. This helps you to achieve a quicker operation of the MSC-L.

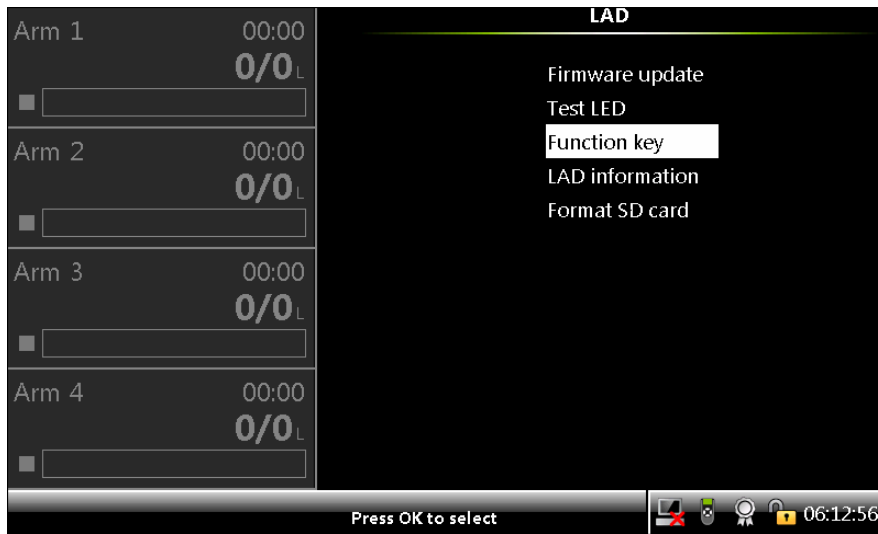

- The LAD . Function Key screen appears, which specifies the functions that can be programmed. Navigate and select <Screen Capture>

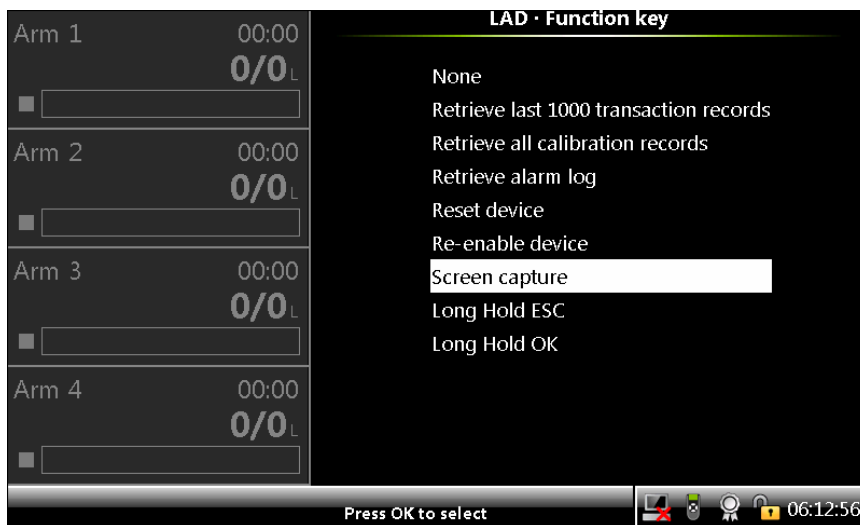

Screen-shots can now be made by pressing the function key. When the function key is pressed the screen freezes for a couple of seconds and after that a progress bar is displayed to indicate the progress.

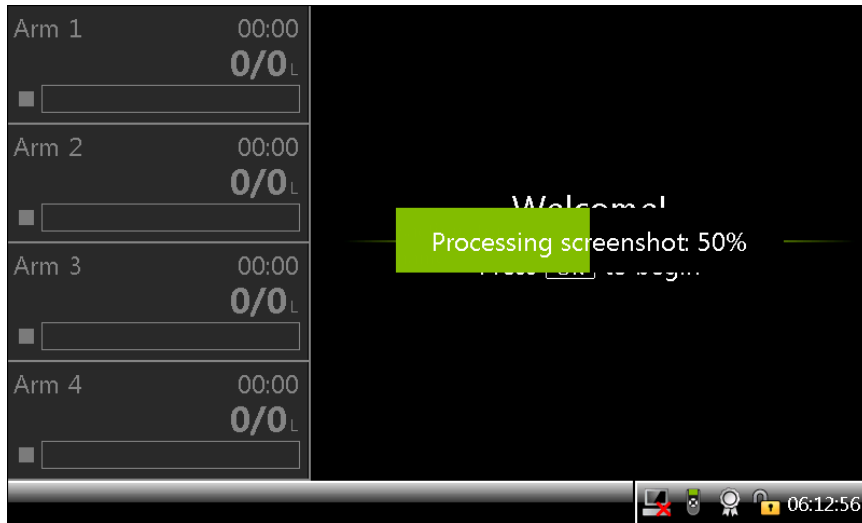

The screenshot is saved on the SD card in the LAD in the directory Honeywell/MSC-L/Specific/MSC-L-<device>/Screenshots.

The name of the screenshot is the timestamp of when it is taken and is in ddmmyyyy_hhmmss.png format (Example 05122014_133359.png)

Notice

All procedures, data, information, drawings, specifications or other material, whether accompanying this document or separately supplied in furtherance of this document, contain confidential and proprietary information which (i) is the property of Guidant Measurement (Guidant) and its subsidiaries, (ii) is disclosed by Guidant only in confidence, and (iii) except as Guidant may otherwise permit in writing, is to be used, disclosed or copied only to the extent necessary for the evaluation and use thereof by the recipient.

The foregoing shall not apply to any such material to the extent that the contents (i) are now or subsequently become available to the public without payment, (ii) were previously known to the recipient, or (iii) subsequently become otherwise known to the recipient without restriction.

This document is based on information available at the time of its publication. While efforts have been made to be accurate, the information contained herein does not purport to cover all details or variations in hardware and software, nor to provide for every possible contingency in connection with installation, operation and maintenance.

Guidant makes no representation or warranty, either expressed or implied, with respect to, and assumes no responsibility for, the accuracy, completeness, or sufficiency of the information contained herein. No warranties of merchantability or fitness for a particular purpose shall apply.

The Guidant logo is a trademark.

This document takes precedence over and supercedes in their entirety all previous versions or revisions.

MN06308 Issue/Rev. 0.2

© 2026 Guidant Corporation
All rights reserved.